



Assembly instruction

DSX



Ferdinand Schad KG
Steigstraße 25-27
D-78600 Kolbingen
Telephone +49 (0) 74 63 - 980 - 0
Fax +49 (0) 74 63 - 980 - 200
info@schako.de
www.schako.de

Assembly instruction DSX

1. Suspend box for beginning of band from ceiling suspension

(Fig. 1.1)

Fig. 1.1



2. Attach box joining sheets (Figs. 2.1 - 2.3)

Fig. 2.1

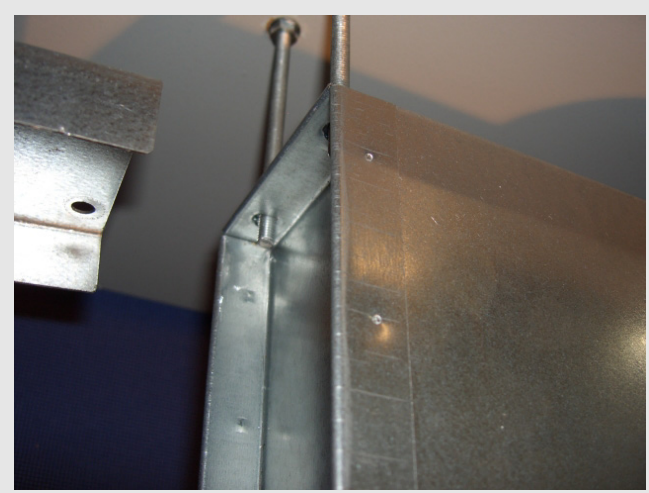


Fig. 2.2


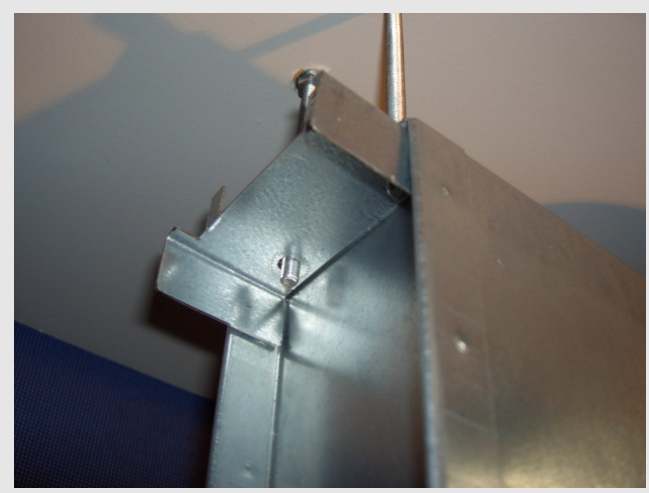


Fig. 2.3

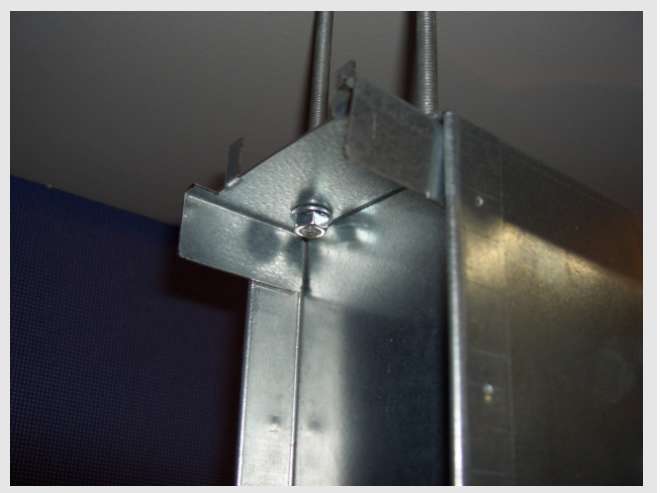

Then align box via nuts and fix it.

3. Hang next box of the band design into box joining sheet (Figs. 3.1 - 3.2) and into suspending device (Fig.1.1)

Fig. 3.1



Fig. 3.2



4. Use pliers (water-pump pliers, etc...) to bend the fish-

Assembly instruction DSX

plates of the box joining sheets (Figs. 4.1 - 4.2)

Fig. 4.1



Fig. 5.2


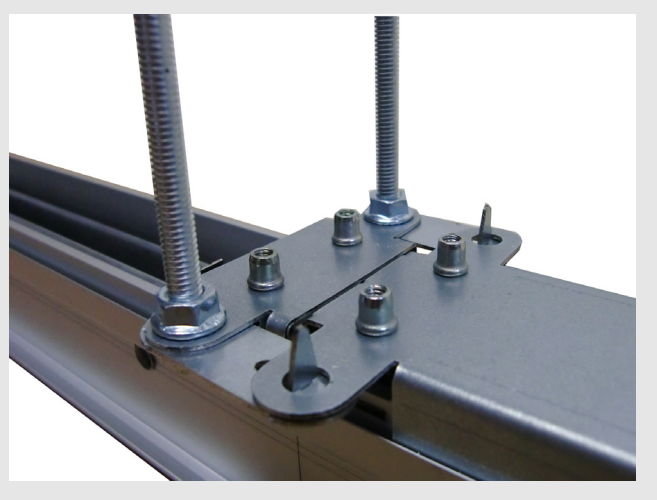


Fig. 4.2



Fig. 5.3

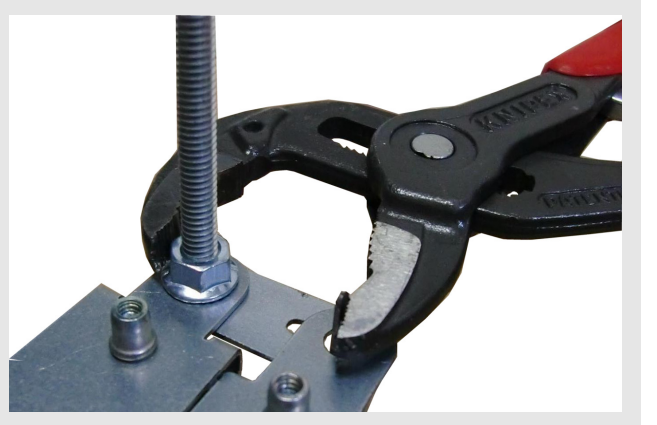

To continue the band, see again (Figs. 3.1 - 3.2)

5. For fastening in case of overflow mode or dummy pipes, use additional connecting fishplates. (Figs. 5.1 - 5.3)

Fig. 5.1



6. Remove all outer blades from the front sides. Press on the connecting springs using the mounting handle (Figs. 6.1 - 6.4)

Fig. 6.1



Connecting spring

Assembly instruction DSX

Fig. 6.2



Mounting handle

Fig. 6.3



Fig. 6.4



7. Insert blades again in the correct air throw direction
Fig. 7.1

